


## INSTRUCTIONS TO ACCESS SOFTWARE MENU

(only in V0.28 and above Display Throttle software)

1. Connect the Hydropack battery and within 15 seconds of powering on press the 'down' button to access the full menu

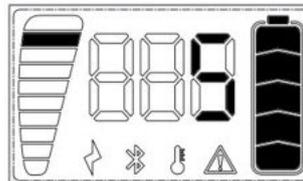


Hour Meter


2. If 'Screen one- hour/minute meter' 'is not shown after pressing the 'down' button you need to update the firmware from the factory settings

[Update firmware instructions](#)

3. Press up/down to scroll up and down
  - I. Screen one – Hour/minute meter
  - II. Screen two – Last error code
  - III. Screen three – Bike controller firmware version
  - IV. Screen four – Display firmware version
  - V. Screen five – Battery firmware version
  - VI. Screen six – Bike ride mode

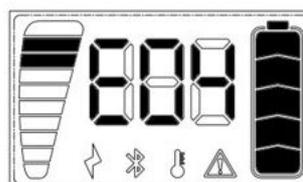


Last Error

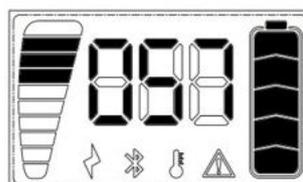

Bike controller  
Firmware Version

4. ⚡ button for selection
5. Close: PWR button or wait for 30 seconds

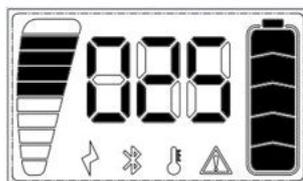


Display  
Firmware Version


Software out of date

If the software is out of date and update is required to ensure the bike is functioning correctly. A PC is required to do this.

[Update firmware instructions](#)

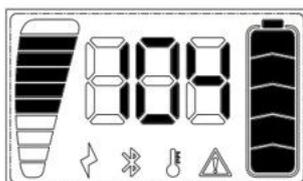

Battery  
Firmware Version

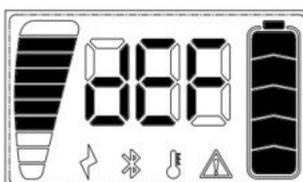

Bike Mode