

This article shows how the Tiller Arm can be removed from the Front Tiller Pivot Junction if it is seized and not removable by hand.

1.1 Bend a 16mm x 10mm x 550 mm aluminium rod following the curve of the Tiller Arm to use as a ram rod.




1.2 Remove M8 Stainless steel screw from Pivot Junction



1.3 Remove M5 screws that hold Pivot Junction LH and RH sides together



1.3 Clamp the assembly by the Front Tiller Arm in a vice using soft jaws

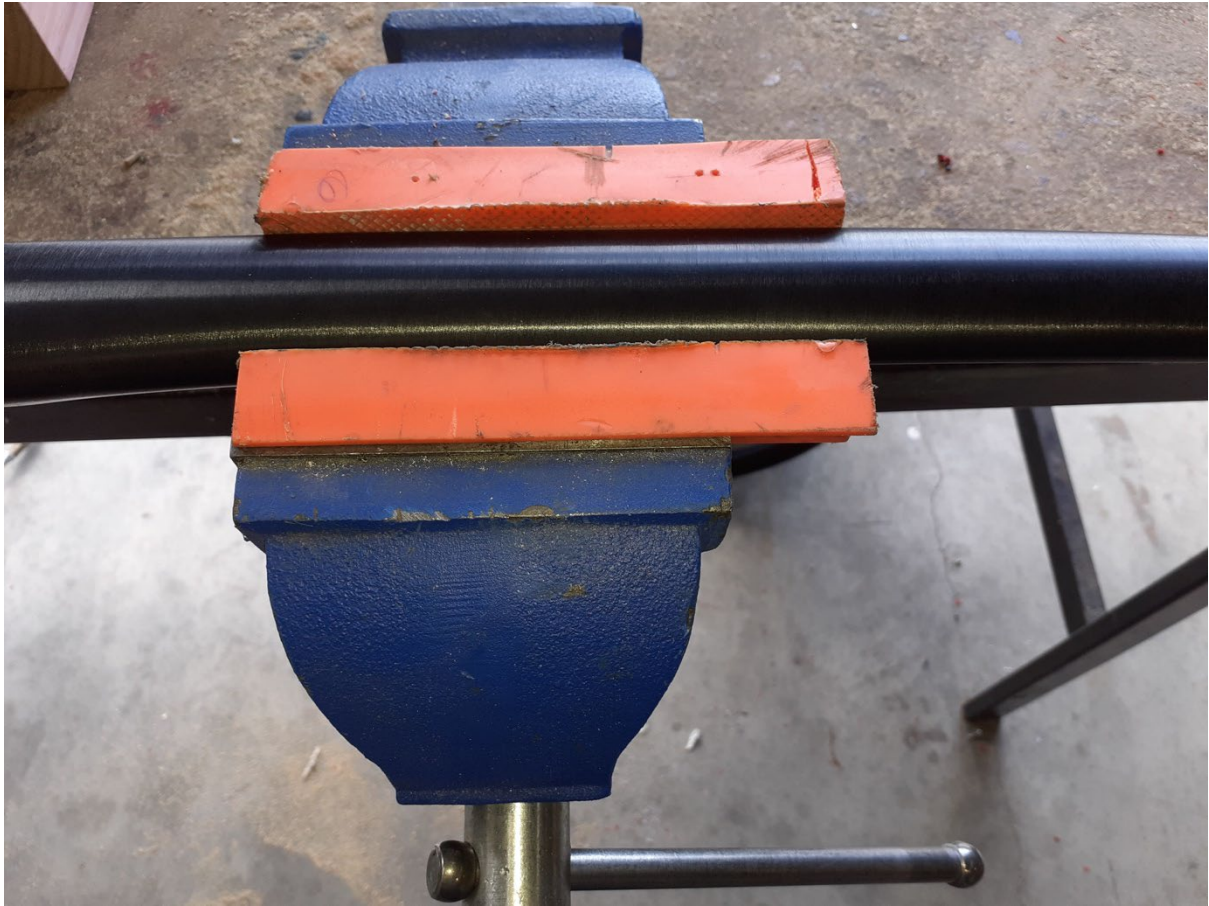

1.4 Using the aluminium rod and hammer, punch out the Pivot Junction halves





1.5 Front Tiller Arm separated from Tiller Junction for rebuild.



